

Panasonic®

Operating Instructions Wide LCD TV

Model No. **TX-26LE7FA**
TX-32LE7FA

VIERA



HD
ready

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

**TOP
TEXT**

Link

English

Please read these instructions before operating your set and retain them for future reference.
The images shown in this manual are for illustrative purposes only.



TQB0E0505U


Turn your own living room into a movie theatre!

Experience an amazing level of multi-



media excitement

Enjoy rich multi-media

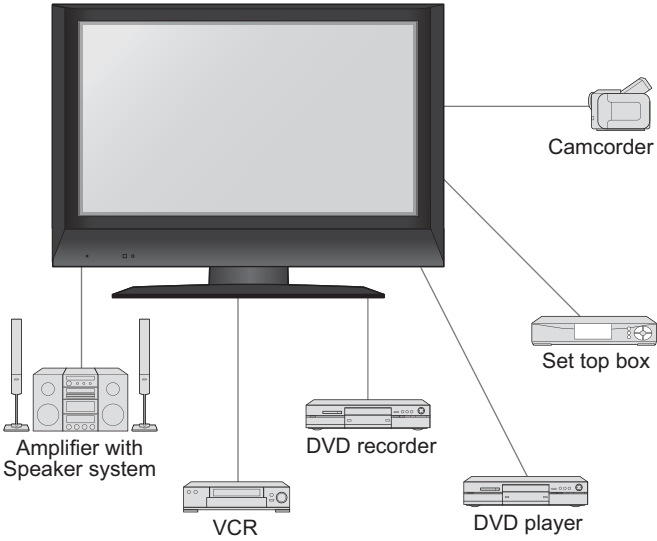

Contents

Be Sure to Read

- Safety Precautions 4
(Warning / Caution)
- Notes 5
- Maintenance 5

Quick Start Guide

- Accessories / Options 6
- Identifying Controls 7
- Connection 8
- Auto Setup 9

Enjoy your TV!

Basic Features

- Watching TV 10
- Watching Videos and DVDs 11
- Viewing Teletext 12

Advanced Features

- How to Use Menu Functions 14
(picture, sound quality, etc.)
- Editing and Setting Channels 16
- External Equipment 18
(Q-Link / VIERA Link / Connections)

FAQs, etc.

- Technical Information 24
- FAQs 27
- Licence 29
- Specifications 29

Safety Precautions

Warnings and Precautions

Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. (If the mains plug is loose, it could generate heat and cause fire.)
- Ensure that the mains plug is easily accessible.
- Do not touch the mains plug with a wet hand. (This may cause electrical shock.)
- Do not damage the mains lead. (A damaged lead may cause fire or electrical shock.)
 - Do not move the TV with the lead plugged in the socket outlet.
 - Do not place a heavy object on the lead or place the lead near a high-temperature object.
 - Do not twist the lead, bend it excessively, or stretch it.
 - Do not pull on the lead. Hold onto the mains plug body when disconnecting lead.
 - Do not use a damaged mains plug or socket outlet.

If you find any abnormality, remove the mains plug immediately!
(such as strange smell or smoke)

AC 220-240 V
50 Hz



Do not remove covers NEVER modify the unit yourself

(High-voltage components may cause serious electrical shock.)

- Have the unit checked, adjusted, or repaired at your local Panasonic dealer.

Do not place foreign objects inside the unit

- Do not let any objects drop into the unit through the air vents (fire or electrical shock may result).

Do not expose to direct sunlight and other sources of heat

- Avoid exposing the TV set to direct sunlight and other sources of heat. To prevent fire never place any type of candle or naked flame on top or near the TV set.

Keep liquids away from the TV

- To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.
- Do not place containers with water (flower vase, cups, cosmetics, etc.) above the set. (including on shelves above, etc.)

■ Do not place the TV on an unstable surface

■ Use only the dedicated stands / mounting equipment

- Using an unauthorized stand or other fixtures may make the unit unstable, risking injury. Be sure to ask your local Panasonic dealer to perform setup.
- Use optional stands / mounts (p. 6).

Notes


■ When cleaning the TV unit, remove the mains plug

(Cleaning an energized unit may cause electrical shock.)

■ Remove the mains plug from the wall socket when TV is not in use for a prolonged period of time. Remove the mains plug from the wall socket before connecting or disconnecting any leads.

- This TV will still consume some power even in the Standby mode, as long as the mains plug is still connected to a live socket outlet. On /Off switch see page 7.

■ Allow sufficient space around the unit for radiated heat

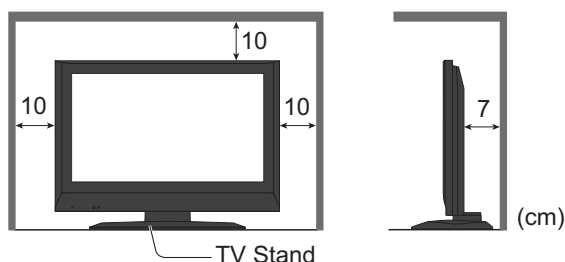

■ Do not block the rear air vents

- Blocked ventilation by curtains, etc. may cause overheating, fire or electrical shock.



■ Keep the TV away from this equipment

- Electronic equipment

In particular, do not place video equipment too close to the TV (electromagnetic interference may distort images / sound).

- Equipment with an infrared sensor

Remote Controller of this TV also emits infrared rays (this may affect operation of other equipment).

■ Do not expose your ears to excessive sound pressure from headphones. Irreversible damage can be caused.

Maintenance

First, remove the mains plug from the socket outlet.

Display panel

Daily care: Gently wipe the surface clean of dirt by using a soft cloth.

Detail: Wipe the surface clean using a soft cloth dampened with clean water or water containing a small amount of neutral detergent. Then, using a soft dry cloth, evenly wipe the surface clean until it is dry.

Caution

- The surface of the display panel has been specially treated and may be easily damaged. Do not tap or scratch the surface with your fingernail or other hard object.
- Use care not to subject the surface to bug repellent, solvent, thinner, or other volatile substances (this may degrade surface quality).

Cabinet

Daily care: Wipe the surface clean using a soft dry cloth.

Detail: Dampen a soft cloth with clean water or water containing a small amount of neutral detergent. Then, wring the cloth and wipe the surface clean with it. Finally, wipe the surface clean with a dry cloth.

Caution

- Use care not to subject the TV unit's surfaces to detergent. (A liquid inside the TV unit could lead to product failure.)
- Use care not to subject surfaces to bug repellent, solvent, thinner, or other volatile substances (this may deteriorate the surface by peeling the paint).
- Do not allow the cabinet to make contact with a rubber or PVC substance for a long time.

Mains plug

Wipe the mains plug with a dry cloth at regular intervals. (Moisture and dust may lead to fire or electrical shock.)

Accessories / Options

 
Standard accessories

- ☐ Remote Control Transmitter
- EUR7651030A




Check that you have the accessories and items shown ☒

- ☐ Batteries for the Remote Control Transmitter (2)
- R6 (UM3)




- ☐ Operating Instructions
- ☐ Pan European Guarantee Card

- ☐ Clamper

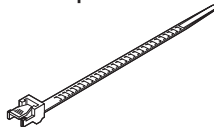


Installing remote's batteries

1

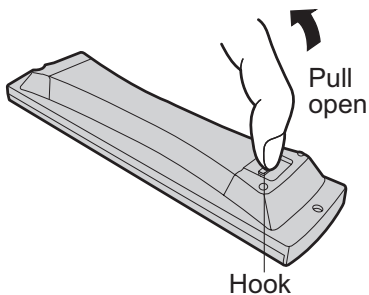


2

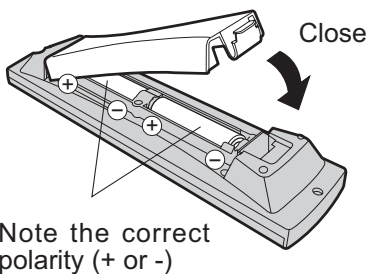

Caution


- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control unit.
- Do not mix old and new batteries.
- Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or breakup batteries (see page 32).

Attaching the clamper

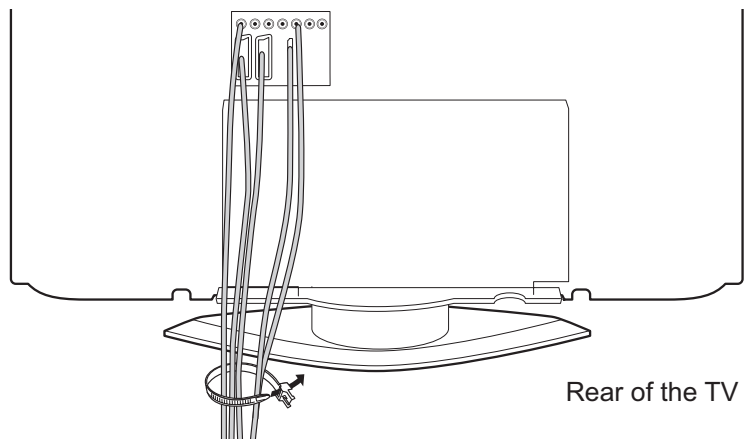


Bundle the cables

To tighten:

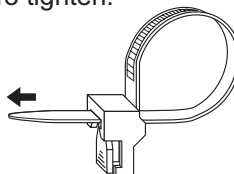

To loosen:

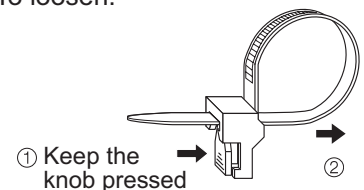


- Do not bundle the RF cable and mains lead together (could cause distorted image).
- Fix cables with clampers as necessary.
- When using the optional accessory, follow the option's assembly manual to fix cables.

Optional accessories

Wall-hanging bracket



- TY-WK32LX20W

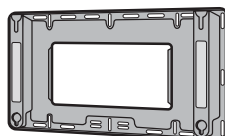

Caution

- In order to maintain the unit's performance and safety, be absolutely sure to ask your dealer or a licenced contractor to secure the wall-hanging brackets.
- Handle the TV carefully during installation since subjecting it to impact or other forces may cause product damage.
- Take care when fixing wall brackets to the wall. Always ensure that there are no electrical cables or pipes in the wall before hanging bracket.


Identifying Controls

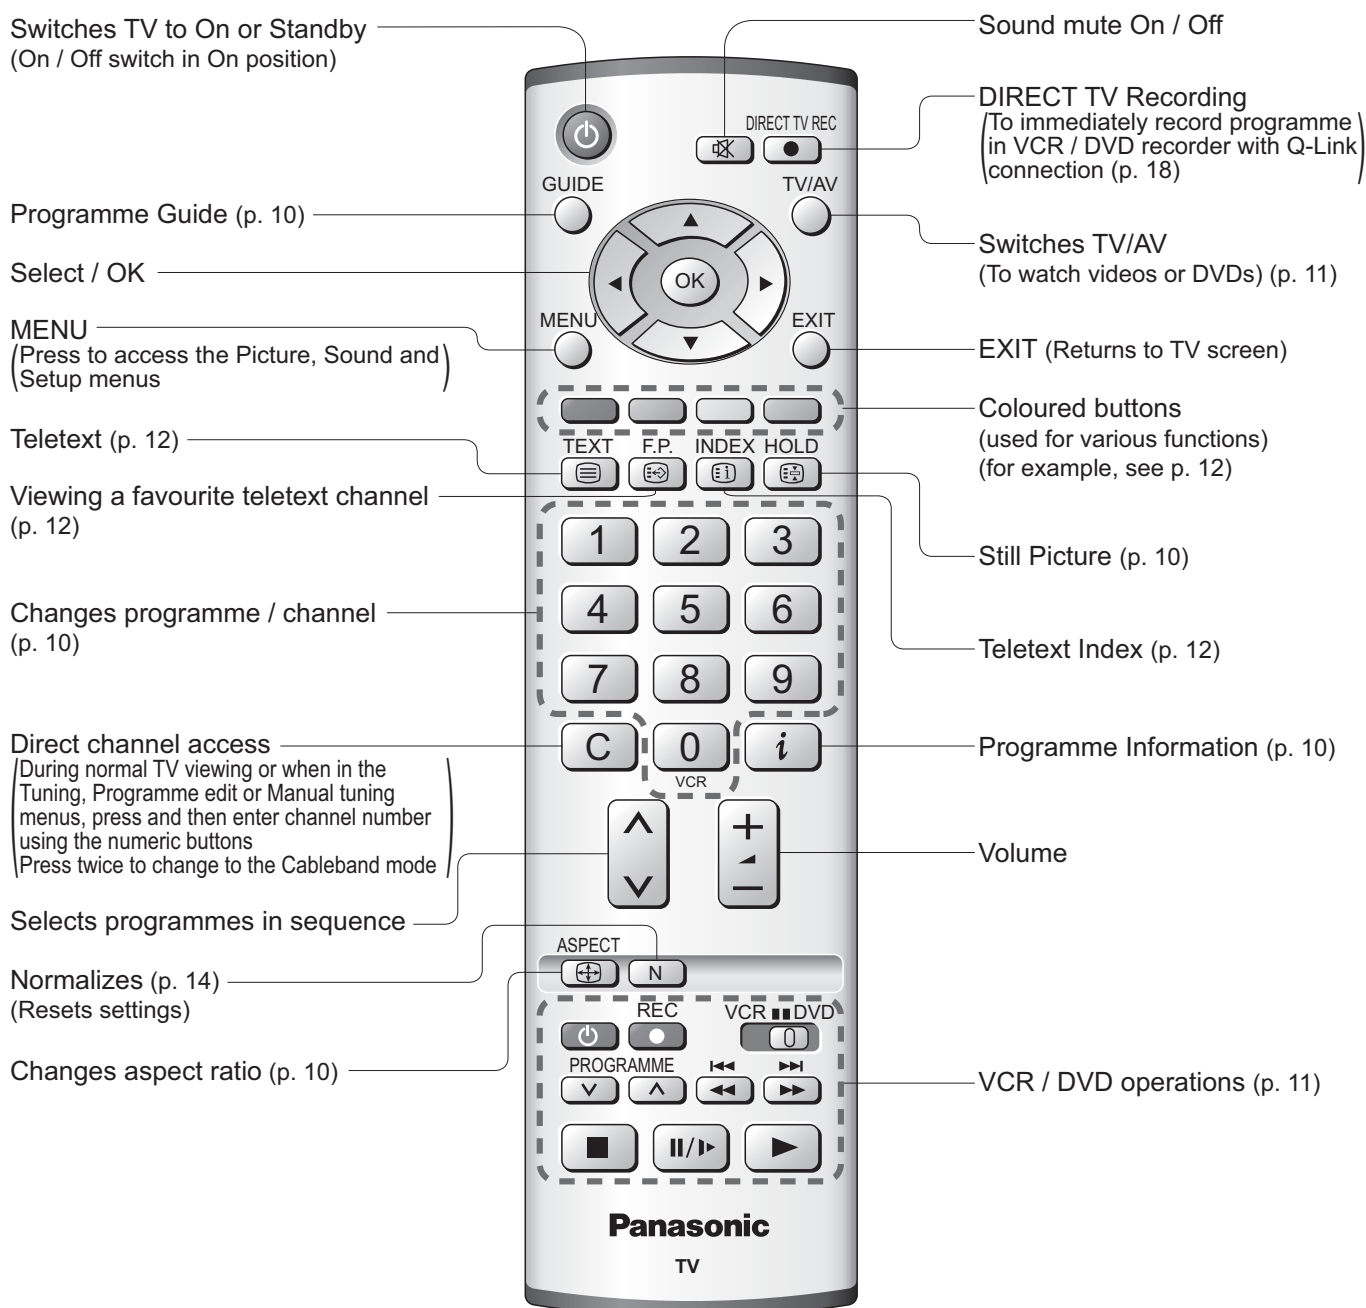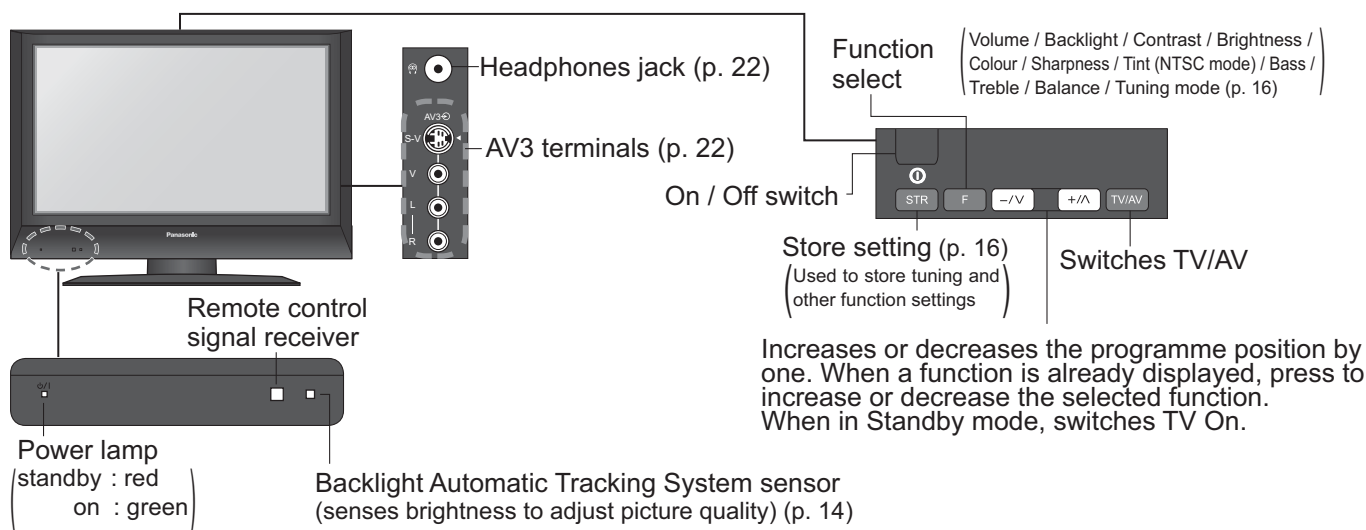

Connection

External equipments and cables shown in this manual are not supplied with this TV.
Please ensure that the unit is disconnected from the mains before attaching or disconnecting any leads.


Rear of the TV

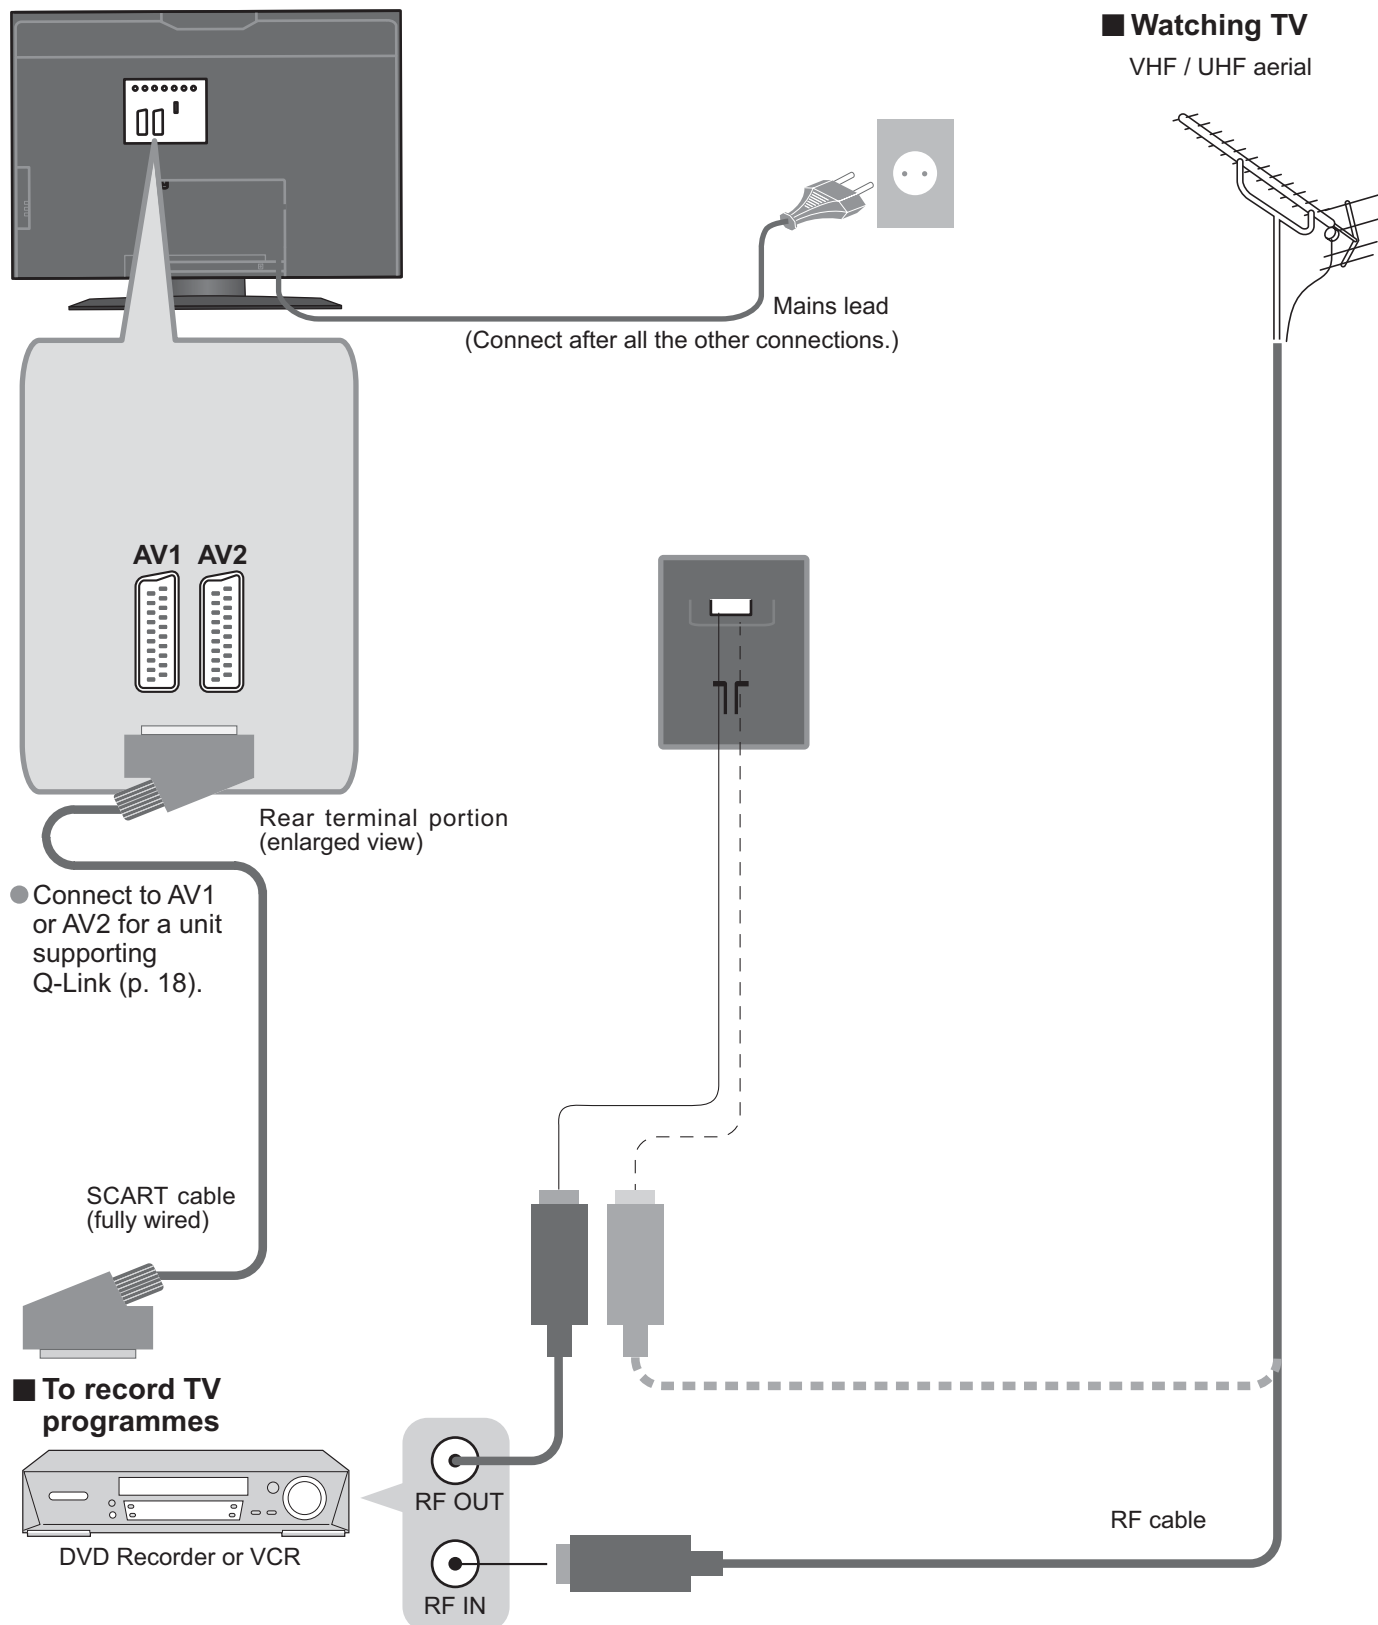

Auto Setup

Search and store TV channels automatically.

These steps are not necessary if the setup has been completed your local dealer.


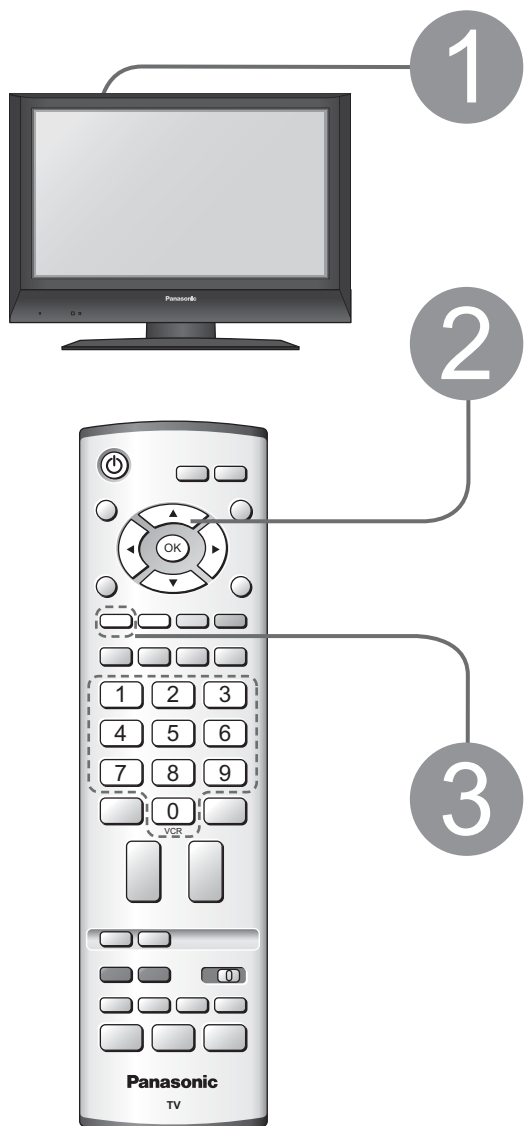


1 Turn the TV On with the On / Off switch



- You can now use the remote control to turn On the unit or turn the unit to standby mode. (Power lamp: On)

 2 Select your country

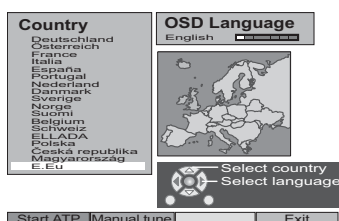


- For Belgium, Switzerland and E.Eu, select the desired language →




- To set manually → green (p. 16)

3 Start Auto Setup

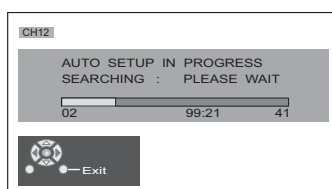

- Auto Setup will start to search for TV channels and store them.

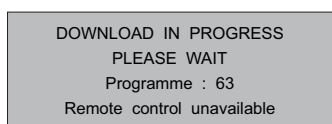

- If Q-Link (p. 16) equipment is connected, channel information is automatically downloaded to the equipment.




Auto Setup is now complete and your TV is ready for viewing.



- To edit channels → "Programme edit" (p. 16)


Need help with operations?

(example: Sound menu)

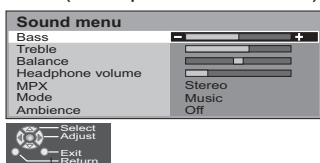

On-screen operation guide will help you.

Watching TV

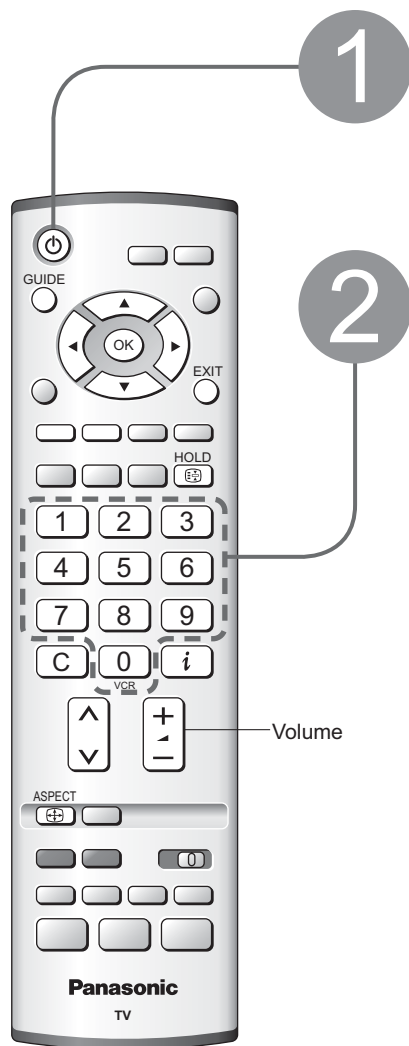

1 Turn power on



(for about 1 second)

● On / Off switch on unit should be On.

 
2

Select a programme number



up

or



down

 
■ To select the two-digit programme number, e.g. 39

→ **3** → **9** (in a short time)

Select from the Programme table



select page



① select programme

② watch

Programme Guide					
Prog.	Name	Chan.	Prog.	Name	Chan.
VCR :		CH21	13 :		—
1 :	Das Erste	CH44	14 :		—
2 :	ZDF	CH51	15 :		—
3 :	RTL	CH41	16 :		—
4 :		CH47	17 :		—
5 :		CH23	18 :		—
6 :		CH26	19 :		—
7 :		CH58	20 :		—
8 :		—	21 :		—
9 :		—	22 :		—
10 :		—	23 :		—
11 :		—	24 :		—
12 :		—			

■ Other Useful Functions (Operate after ②)

Hold

Freeze / unfreeze picture

HOLD



Display status information

Display / hide status information




● Displayed information:
Programme number / Programme name / Channel number / MPX mode (p. 14) / Sound system (p. 14) / Aspect mode

Change aspect ratio

Change the aspect ratio (p. 24)

ASPECT

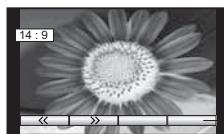

● Each press changes the mode.

(Auto aspect / 16:9 / 14:9 / Just / 4:3 / 4:3 Full /)
(Zoom1 / Zoom2 / Zoom3

While the bar is displayed

→
red green

Watching Videos and DVDs

It is possible to connect a variety of external equipment to the TV unit. Once the equipment is connected, use the following procedure to view the input. To connect the equipment (p. 24)

1 With the equipment turned On
Select the external input
TV/AV

2 **Select the connector**
connected to the equipment

■ To return to TV
TV/AV

(AV mode screen)

AV1

AV1 AV2/S AV3/S NEXT >

AV2

AV1 AV2/S AV3/S NEXT >

blue

red

HDMI

< BACK Component HDMI

Displays the selected connector

red green yellow

AV1 AV2/ AV3/

S-video S-video

yellow blue

Component HDMI

● example: AV1 → red Component → blue → yellow

Note

- Automatic Input selection - Input mode is automatically switched from TV to AV mode when the equipment connected via SCART or HDMI terminal is operated. When the equipment is turned off, the TV is set to TV mode.
- If the external equipment has an aspect adjustment function, set to "16:9".
- For details, see the manual of the equipment or ask your local dealer.

Panasonic equipment connected to the TV can be directly operated with the remote control.

<p>VCR / DVD switch*</p> <p>Select VCR to operate Panasonic VCR or DVD equipment Select DVD to operate Panasonic DVD equipment or Player theatre</p>	<p>Fast-forward / Skip / Search VCR: Fast-forward, cue (during playback) DVD: Skip to the next track or title Press and hold to search forward</p>
<p>Standby Set to Standby mode / Turn on</p>	<p>Pause Pause / Restart DVD: Press and hold for slow-motion play</p>
<p>Play Playback VCR / DVD</p>	<p>Programme Up / Down Select programme</p>
<p>Stop Stop the operations</p>	<p>Record Start recording</p>
<p>Rewind / Skip / Search VCR: Rewind, review (during playback) DVD: Skip to the previous track or title Press and hold to search backward</p>	

***The remote control will be available for various Panasonic equipment with the following settings.**

① Switch to select VCR or DVD you want to change → VCR / DVD switch

② Press and hold **Power** → Enter the code below (two digit code) → Press **Stop**

VCR

Equipment	Code
VCR	10 (default)
DVD	11

DVD

Equipment	Code
DVD	70 (default)
Player theatre	71

Note

- After setting, execute operation confirmation.
- The respective VCR / DVD code is turned to the default when battery has been exchanged. Set it again.
- Depending on the model, operation may not be possible.

Viewing Teletext

You can enjoy teletext broadcasting, including news, weather forecasts and subtitles, if this service is provided by the broadcasters.

What is FLOF mode?

In FLOF mode, four differently coloured subjects are situated at the bottom of the display. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information on the subjects shown.


What is TOP mode?

TOP Teletext makes the task of selecting the desired Teletext pages easier and shorter. In fact page access time is almost instantaneous, just press the button and the page appears.

What is List mode?

In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory. ("Store Frequently viewed pages", p. 13)

■ To change mode → "Teletext" in Setup menu (p. 14)



1 Switch to Teletext

● Displays Index (content varies depending on the broadcasters)

TEXT

2 Select the page

1 2 3
4 5 6
7 8 9
0
VCR

or

up
down

or

red green yellow blue
(Corresponds to the colour bar)

■ To adjust contrast →

MENU

As the blue bar is displayed

■ To return to TV

TEXT

■ Using teletext conveniently

Reveal hidden data

Reveal hidden words e.g. quiz page answers

MENU → red ● Re-hide → red

FULL / TOP / BOTTOM

MENU → green

(TOP)

100 Broadcast

- + 150 200

→

(BOTTOM)

Expand the BOTTOM half

→

Normal (FULL)

100 Broadcast

- + 150 200

HOLD

If you wish to hold the current page without updating
Stop or resume automatic updating



■ To resume

**INDEX**

Return to the main index page


**Call up a
favourite
pages**

 

- Call up the page stored in "blue".
- Factory setting is "103".

**View in
multi
window**

Watch TV and Teletext in two windows at once



(Press twice)



- Select Picture and text
On or Off



- Operations can be made only in Teletext screen.

**Store
frequently
viewed
pages**

**Store frequently viewed pages
(only on first 25 channels on Programme Guide)
in the colour bar**

(List mode only)


As page is
displayed



Corresponding
colour button



hold
down

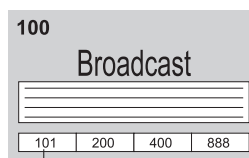


The number changes to white.

■ To change stored pages



Colour button you
want to change


Enter new page number

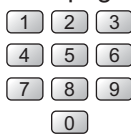

hold
down


**View sub
page**

 View sub page (Only when teletext is more than one page)




Appears at upper-left
corner of the screen

 ■ To view specific sub page



Enter the
4-digit number

 example: P6




- Sub pages:

The number of sub pages varies depending on the broadcasters (up to 79 pages).
It may take some time for searching, during which time you can watch TV.

**Watch
TV while
waiting
for update**

View the TV picture while searching for a teletext page

Teletext automatically updates itself when new information becomes available.
Changes to TV screen temporarily

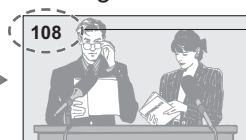

Appears
when
updating is
completed



View the
updated
page

(You cannot change the channel.)

- The news page provides a function that indicates arrival of latest news ("News Flash").

How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions so that you can enjoy watching TV in your own way.



1

Display menu



 
MENU ● Displays the functions that can be set (varies according to the input signal)

2

Select the menu




(example: Picture menu)




3

Select the item

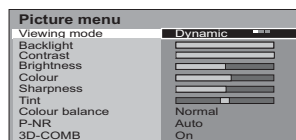


(example: Picture menu)

 


4

Adjust or select

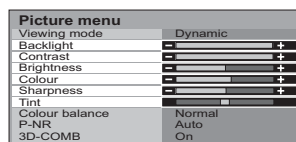

(example: Picture menu)

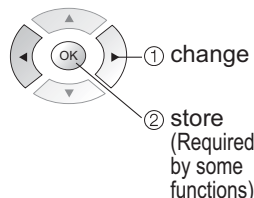


■ To return to TV



■ To return to the previous screen



■ Choose from among alternatives

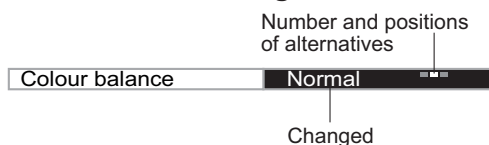

■ Adjust using the slide bar



■ Go to the next screen



■ To reset the setting



■ Menu list


Menu	Item
Picture menu	Viewing mode
	Adjust by each viewing mode
	Backlight, Contrast, Brightness, Colour, Sharpness
	Tint
	Colour balance
Sound menu	P-NR
	3D-COMB
	Bass
	Treble
	Balance
Setup menu	Headphone volume
	MPX
	Mode
	Ambience
	HDMI input
Tuning menu	VIERA Link
	Q-Link
	AV1 out
	AV2 out
	Teletext
	Off timer
	Text language
	Programme edit
	Auto setup
	Manual tuning
OSD menu	Fine tuning
	Colour system
	Volume correction
	OSD language
Colour menu	Colour system
	Volume correction

Adjustments / Configurations (alternatives)		
Basic picture mode (Dynamic / Normal / Cinema) ● Set for each input signal	Viewing mode	Dynamic ■■■■
Adjusts backlight, colour, brightness, etc. for each picture mode to suit your taste	Backlight	— — — — +
	Contrast	— — — — +
	Brightness	— — — — +
	Colour	— — — — +
	Sharpness	— — — — +
Adjusts tint of image ● For NTSC signal reception only	Tint	— — — —
Chooses the colour balance of the entire image (Cool / Normal / Warm)	Colour balance	Normal ■■■■
Automatically reduces unwanted picture noise (Off / Normal / Dynamic / Auto) ● Not valid on HDMI, and HD signal	P-NR	Auto ■■■■
Automatically makes still pictures and slow pictures look more vivid (Off / On) ● For PAL or NTSC signal reception only ● Not valid on RGB, S-Video, components and HDMI	3D-COMB	On ■■
Adjusts the output level of deep bass (High ⇄ Low)	Bass	— — — — +
Adjusts the output level of high-pitch, shrill sound (High ⇄ Low)	Treble	— — — — +
Adjusts volume level of right and left speakers	Balance	— — — —
Adjusts the volume of the headphones (High ⇄ Low)	Headphone volume	— — — — +
Select stereo / monaural (Mono / Stereo) ● Normally: Stereo ● Stereo signal cannot be received: Mono ● M1 / M2: Available while mono signal is transmitted	MPX	Stereo ■■
Improves sound quality for music and dramas (Music / Speech)	Mode	Music ■■
Gives a greater spatial effect by using dynamic enhancer (Off / On)	Ambience	Off ■■
Chooses according to the signal when HDMI is connected (Auto / Digital / Analogue) (p. 25)	HDMI input	Auto ■■■■
VIERA Link function (Off / On) (p. 19)	VIERA Link	On ■■
Chooses the connector to which a Q-Link compatible equipment is connected (Off / AV1 / AV2) (p. 22)	Q-Link	AV2 ■■■■
Chooses the signal to be transmitted from the TV to Q-Link (TV / AV2 / AV3 / Monitor) ● Monitor: Image displayed on screen ● Component signals cannot be outputted	AV1 out	Monitor ■■■■
Chooses the signal to be transmitted from the TV to Q-Link (TV / AV1 / AV3 / Monitor) ● Monitor: Image displayed on screen ● Component signals cannot be outputted	AV2 out	Monitor ■■■■
Teletext display mode (TOP (FLOF) / List) (p. 12)	Teletext	TOP ■■
Sets the time the unit automatically turns Off. (Off / 15 / 30 / 45 / 60 / 75 / 90 minutes)	Off timer	Off ■■■■■■
Selects teletext language (West / East1 / East2) ● West: English, French, German, Greek, Italian, Spanish, Swedish, Turkish ● East1: Czech, English, Estonian, Lettish, Rumanian, Russian, Ukrainian ● East2: Czech, Hungarian, Lettish, Polish, Rumanian	Text language	West ■■■■
Edits channels (p. 16)	Programme edit	Access
Sets channels automatically (p. 16)	Auto setup	Access
Sets channels manually (p. 16)	Manual tuning	Access
Fine tuning of channels (during rain, etc.)	Fine tuning	— — — —
Selects optional colour system depending on video signals (Auto / PAL / SECAM / M.NTSC)	Colour system	Auto ■■■■
Adjusts volume of individual stations	Volume correction	— — — —
Changes language for on-screen displays	OSD language	Access
Selects optional colour system based on video signals in AV mode	Colour system	Auto ■■■■
Adjusts volume for AV and HDMI mode	Volume correction	— — — —

● In AV mode, the Sound menu and Setup menu give a smaller number of options.

Editing and Setting Channels

The current channel settings can be changed according to your needs and reception conditions.



- 1 Display the menu**
MENU
- 2 Select "Setup menu"**
Main menu
Picture menu
Sound menu
Setup menu
- 3 Select "Tuning menu"**
Setup menu
VIERA Link On
Q-Link AV2
AV1 out Monitor
AV2 out Monitor
Teletext TOP
Off timer Off
Text language East2
Tuning menu Access
OSD language
- 4 Select the function**
Tuning menu
Programme edit Access
Auto setup
Manual tuning
Fine tuning
Colour system
Volume correction
- 5 Set**

Edit channels

Programme edit

- Delete
- Add
- Move
- Change channel number
- Change name
- Lock
- Change sound system
- Download to equipment

Set automatically

Auto setup

Set manually

Manual tuning

■ To exit




- No data is stored if an Auto setup sequence is interrupted.

For Manual tuning, using the buttons on the unit
("Tuning mode" on p. 7)



- ① (Press repeatedly until "Tuning mode" appears)
- ② or (Access "Manual tuning")
- ③ (Search, Change TV system, Change programme)
- ④ or (Change programme or start searching channels)
- ⑤ (Store)
- ⑥ ③-⑤ (Repeat)

■ To return to TV

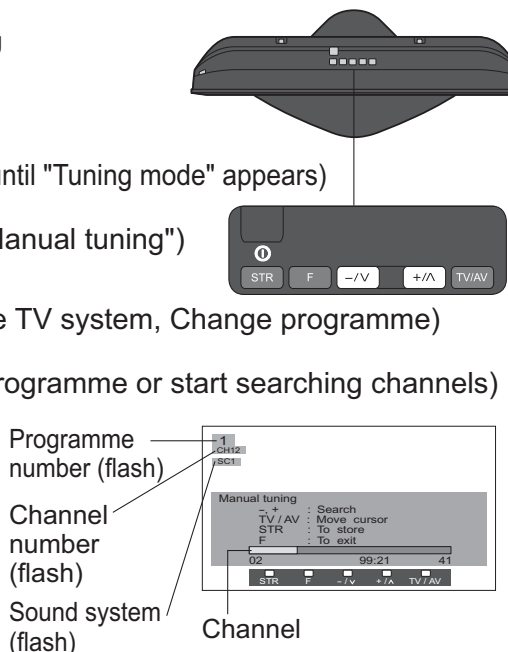① Select the programme number to edit

Programme edit					
Prog.	Chan.	Name	Lock	Sys	
1	CH44	ABC	Off	SC1	
2	CH51	XYZ	Off	SC1	
3	CH41	FTP	Off	SC1	
4	CH47	123	Off	SC1	
5	CH37	456	Off	SC1	

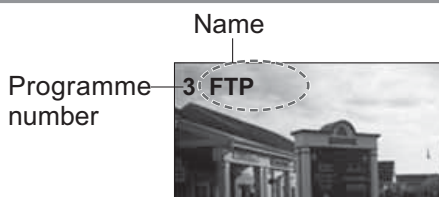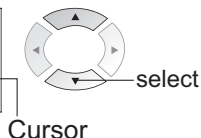


② Edit

- **To delete** → → After confirming, press
- **To add** → → After confirming, press
- **To move** → → Select destination →


■ To change channel number

Programme edit					
Prog.	Chan.	Name	Lock	Sys	
1	CH44	ABC	Off	SC1	
2	CH51	XYZ	Off	SC1	
3	CH41	FTP	Off	SC1	
4	CH47	123	Off	SC1	
5	CH37	456	Off	SC1	

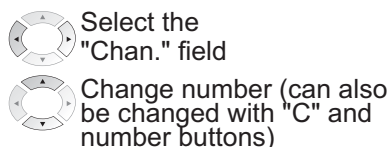

■ To change the name of the broadcaster displayed when selecting channels

Programme edit					
Prog.	Chan.	Name	Lock	Sys	
1	CH44	ABC	Off	SC1	
2	CH51	XYZ	Off	SC1	
3	CH41	FTP	Off	SC1	
4	CH47	123	Off	SC1	
5	CH37	456	Off	SC1	

 


Usable characters
ABCDEFGHIJKLMNOPQRSTUVWXYZ
0123456789

③ Store



■ To lock


Programme edit					
Prog.	Chan.	Name	Lock	Sys	
1	CH44	ABC	Off	SC1	
2	CH51	XYZ	Off	SC1	
3	CH41	FTP	Off	SC1	
4	CH47	123	Off	SC1	
5	CH37	456	Off	SC1	

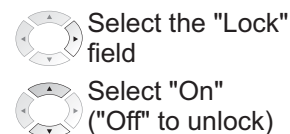

- You cannot select the channel with number buttons or the "C" button when locked.

■ To change sound system based on signals

Programme edit					
Prog.	Chan.	Name	Lock	Sys	
1	CH44	ABC	Off	SC1	
2	CH51	XYZ	Off	SC1	
3	CH41	FTP	Off	SC1	
4	CH47	123	Off	SC1	
5	CH37	456	Off	SC1	

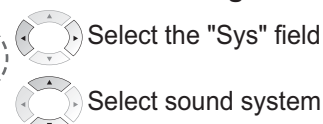


SC1 : PAL B, G / SECAM B, G
SC2 : PAL I
SC3 : PAL D, K / SECAM D, K
F : SECAM L / L'

■ To download channel information to a Q-Link compatible equipment connected to the unit

- → Automatically transmitted (for a few sec.)
- For details (p. 18)
- Not available if "Q-Link" is "Off" in the Setup menu. (p. 14)

Automatically set the channels received in the area



① Start Auto setup

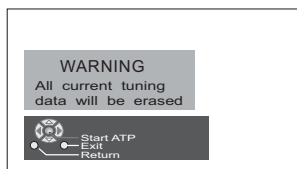

② Select your country



 
③ Settings are made automatically

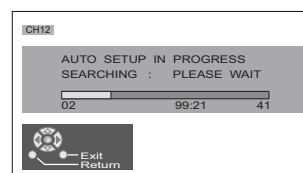

- The settings are downloaded to a Q-Link compatible equipment connected to the unit.
- All previous settings are erased.
- When the sequence is completed, the broadcast of programme number "1" will appear.

To freely change settings after Auto setup

① Select the programme number and search through the channel

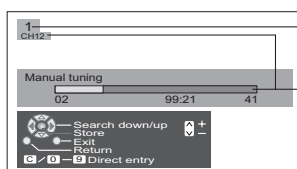

Programme number
Channel



② Store

- The programme number blinks.

③ Repeat ① and ②

Note

- If a VCR is connected with only the RF cable, select programme number "0".

External Equipment

Q-Link

Q-Link interlocks the TV unit and VCR / DVD recorder, enables easy recording and playback.

■ Condition

- Use the VCR / DVD recorder with the following logos:
"Q-Link", "NEXTVIEWLINK", "DATA LOGIC", "Easy Link", "Megalogic", or "SMARTLINK"
- Connect the equipment to this unit's AV1 or AV2 terminal via a "fully-wired" SCART cable. (p. 20)
- Q-Link terminal setup in Setup menu (Q-Link, AV1/AV2 out). (p. 14)

■ Download channel settings

- Perform Auto setup. (p. 16)
When first using this unit, see "Auto Setup". (p. 9)
- Perform download to the equipment. (p. 16)


■ Features available

Some recording equipments are not applicable. Read the manuals of the equipment.

What you see is What you record

Direct TV Recording:

Recording the current programme in VCR / DVD recorder immediately.

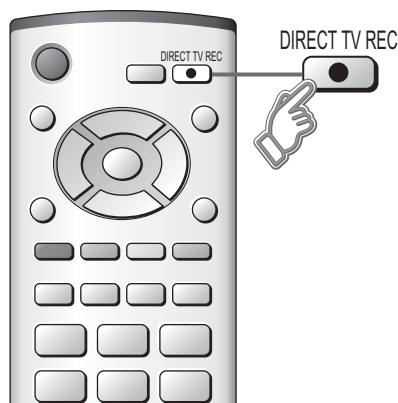

- When Direct TV Recording is performed, the recording equipment is automatically turned on if it is in Standby mode.
- The recording equipment is recording from its own tuner. You can turn the TV off during recording.
- Do not turn the TV off during recording AV source. Otherwise the recording will be stopped.

Information / Message

Recording information or if recording is not possible, a message is displayed. (Only when the programme number is "0" or "AV mode" for some equipment.)

Power on link and Easy playback

Insert a videocassette or DVD in the recording equipment and it is operated, TV is turned on and input mode is switched automatically so that you can view the content. (Only when TV is in Standby mode.)

Power off link

When TV is set to Standby mode, the recording equipment is also automatically set to Standby. (Only when the videocassette or DVD is not active.)

• "DATA LOGIC" (a trademark of Metz Corporation) • "Megalogic" (a trademark of Grundig Corporation)
• "Easy Link" (a trademark of Philips Corporation) • "SMARTLINK" (a trademark of Sony Corporation)
Read the manuals of the equipment too.

VIERA Link "HDAVI Control"*


*Enjoy additional HDMI Inter-Operability with Panasonic products which have "HDAVI Control" function. HDMI connections to some Panasonic equipments (Panasonic DVD Recorder DIGA, Panasonic Player theatre, Panasonic Amplifier, etc.) allow you to enjoy the easy playback or home theatre. About connections, see "Connections" (p. 20, 22). Read the manuals of the equipment too. Non-HDMI-compliant cables cannot be utilized. About applicable equipments, consult your local Panasonic dealer.

Preparations

(For the first time / When adding new equipment, reconnecting equipment or changing setup)

After connection turn the equipment on and then switch the TV on.

Select the input mode to HDMI (p. 11, 14), and make sure that an image is displayed correctly.

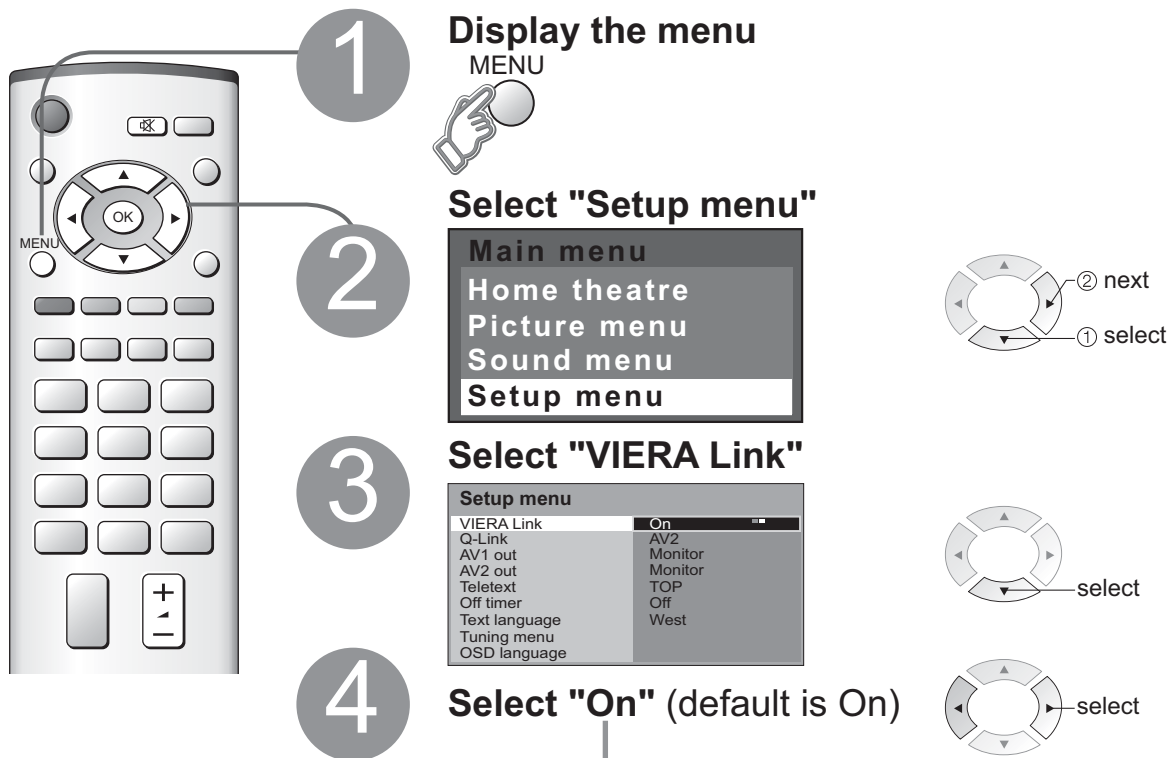

1 Display the menu
MENU

2 Select "Setup menu"
Main menu
Home theatre
Picture menu
Sound menu
Setup menu

3 Select "VIERA Link"
Setup menu
VIERA Link On
Q-Link AV2
AV1 out Monitor
AV2 out Monitor
Teletext TOP
Off timer Off
Text language West
Tuning menu
OSD language

4 Select "On" (default is On)

Easy playback


Automatic Input switching-When the connected Panasonic equipment is operated, input mode is switched automatically. When it is stopped operating, input mode is returned.

Theatre speaker


You can control the theatre speaker with TV's remote control.

This function is available when Panasonic Amplifier or Player theatre is connected.

- ① Display the menu → MENU
- ② Select "Home theatre" or "TV speaker"

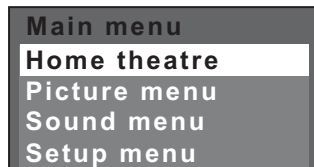

 Main menu
Home theatre
Picture menu
Sound menu
Setup menu



■ Home theatre:

Adjustment for equipment (automatically turned on if it is in Standby mode)

Volume up / down →

Mute →

■ TV speaker:

TV speakers are active.

- When selecting "Home theatre", the sound of TV speakers is mute.
- When the equipment is turned off, TV speakers will be active.

Power on link

When the connected Panasonic equipment is operated, TV is also automatically turned on and the content is reproduced. (Only when TV is in Standby mode.)

Power off link


When TV is set to Standby mode, the connected Panasonic equipment is also automatically set to Standby.

External Equipment


Connections

- External equipments and cables shown are not supplied with this TV.


■ Connect VCR / DVD recorder (Recording, Playback)

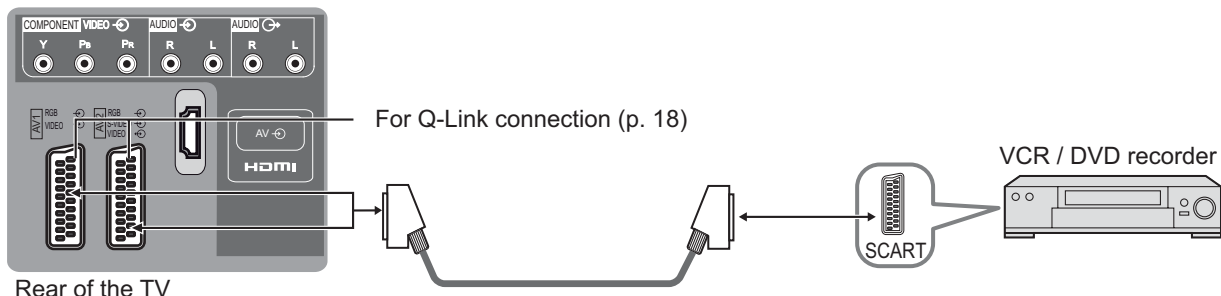


■ Connect DVD player (Playback)

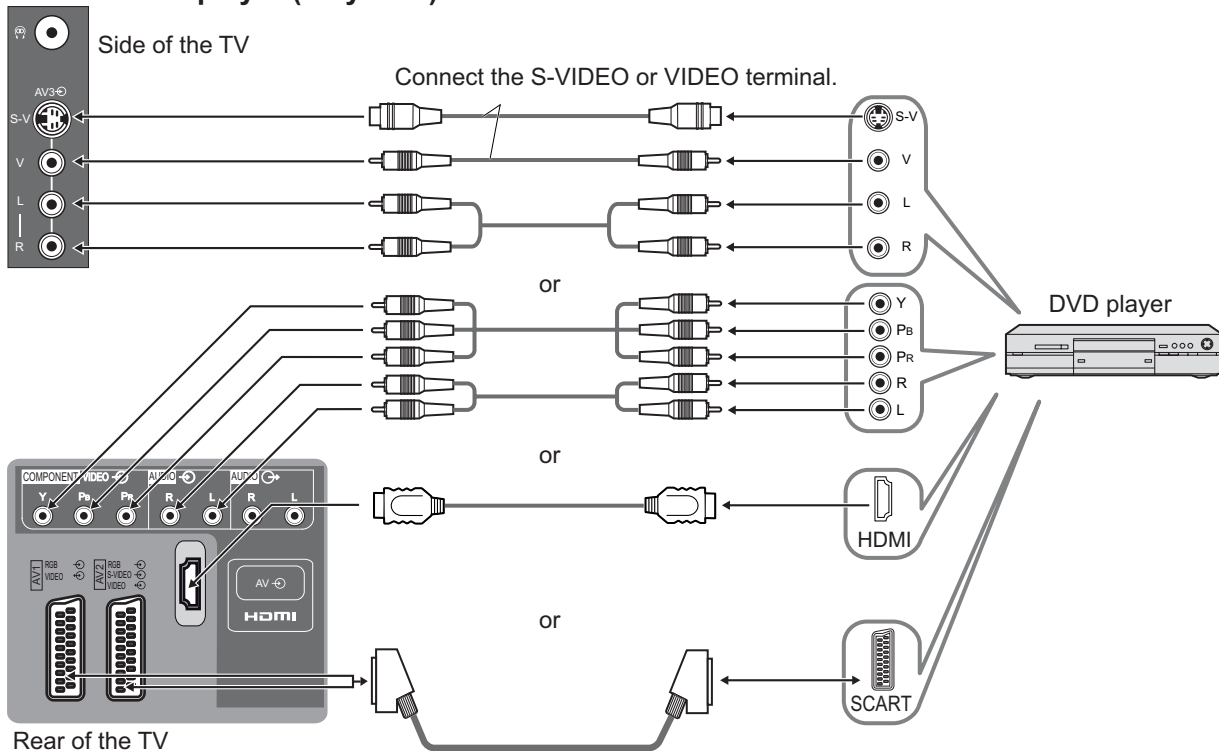

■ Connect Set top box (RGB input)

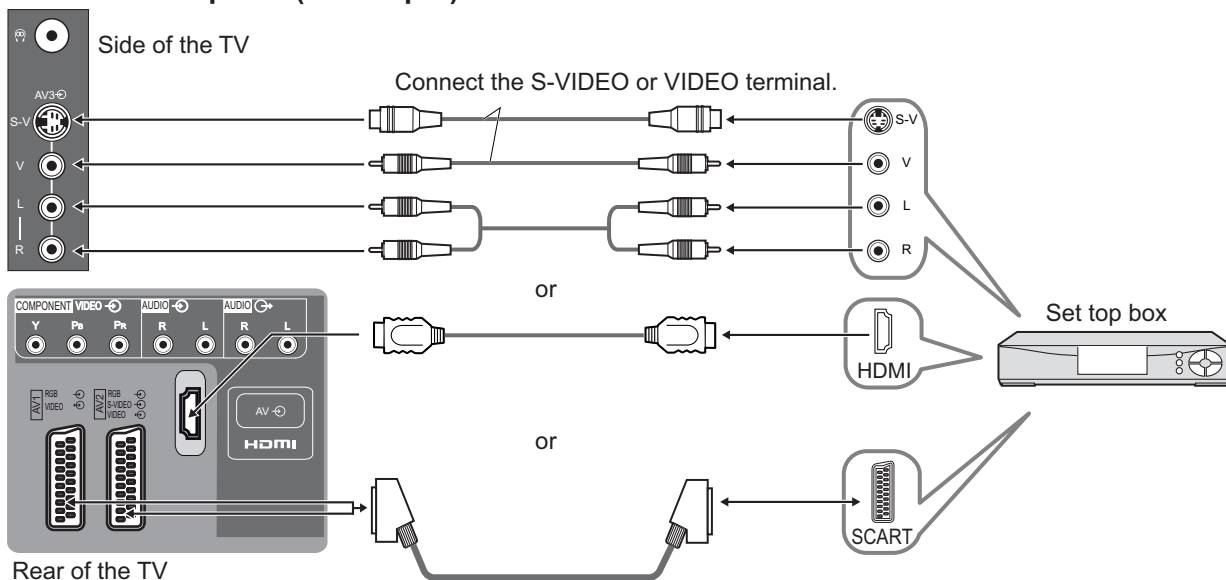


■ Connect VCR / DVD recorder and Set top box (example)

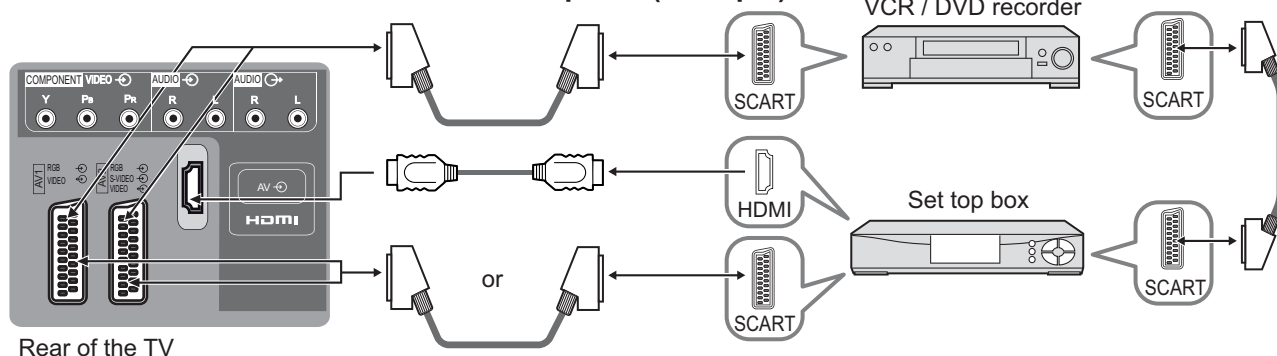

Rear of the TV


■ Connect DVD recorder and VCR (example)

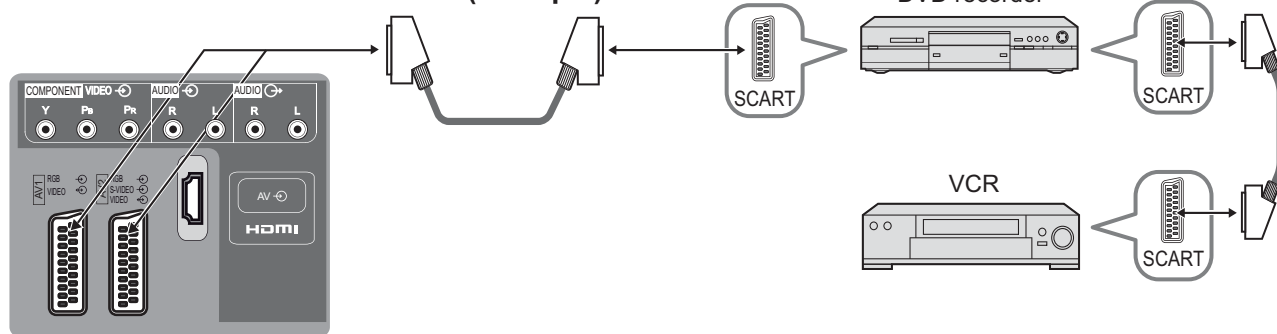

Rear of the TV


VIERA Link (p. 19)

■ Easy playback

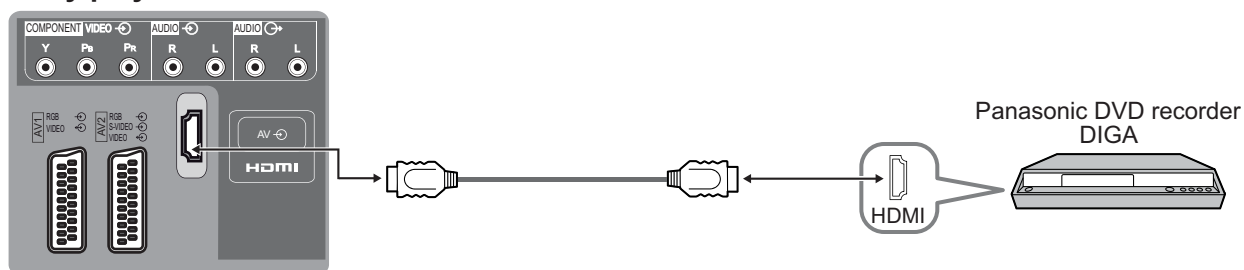

Rear of the TV

■ Home theatre

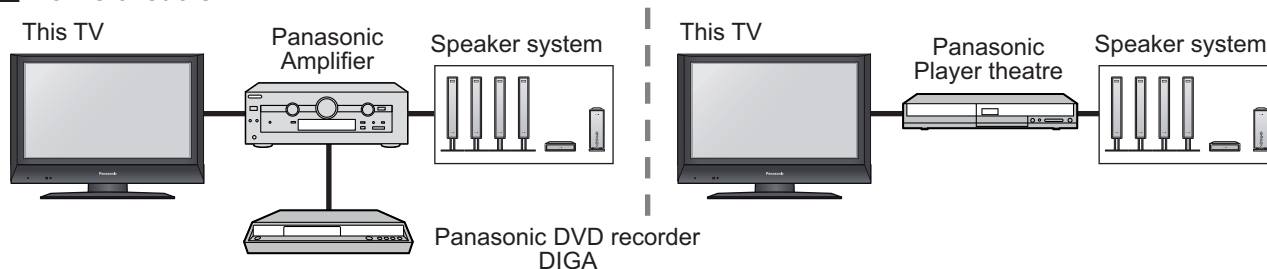


Read the manuals of Panasonic Amplifier or Player theatre for details.

- It is recommended that you use Panasonic's HDMI cable.
Recommended part number: RP-CDHG15 (1.5 m)
RP-CDHG30 (3.0 m)
RP-CDHG50 (5.0 m)

External Equipment


Connections (overview)


These diagrams show our recommendations for how to connect the TV unit to your various equipment. For other connections, consult the instructions of each equipment, the table below, and the specifications (p. 29).

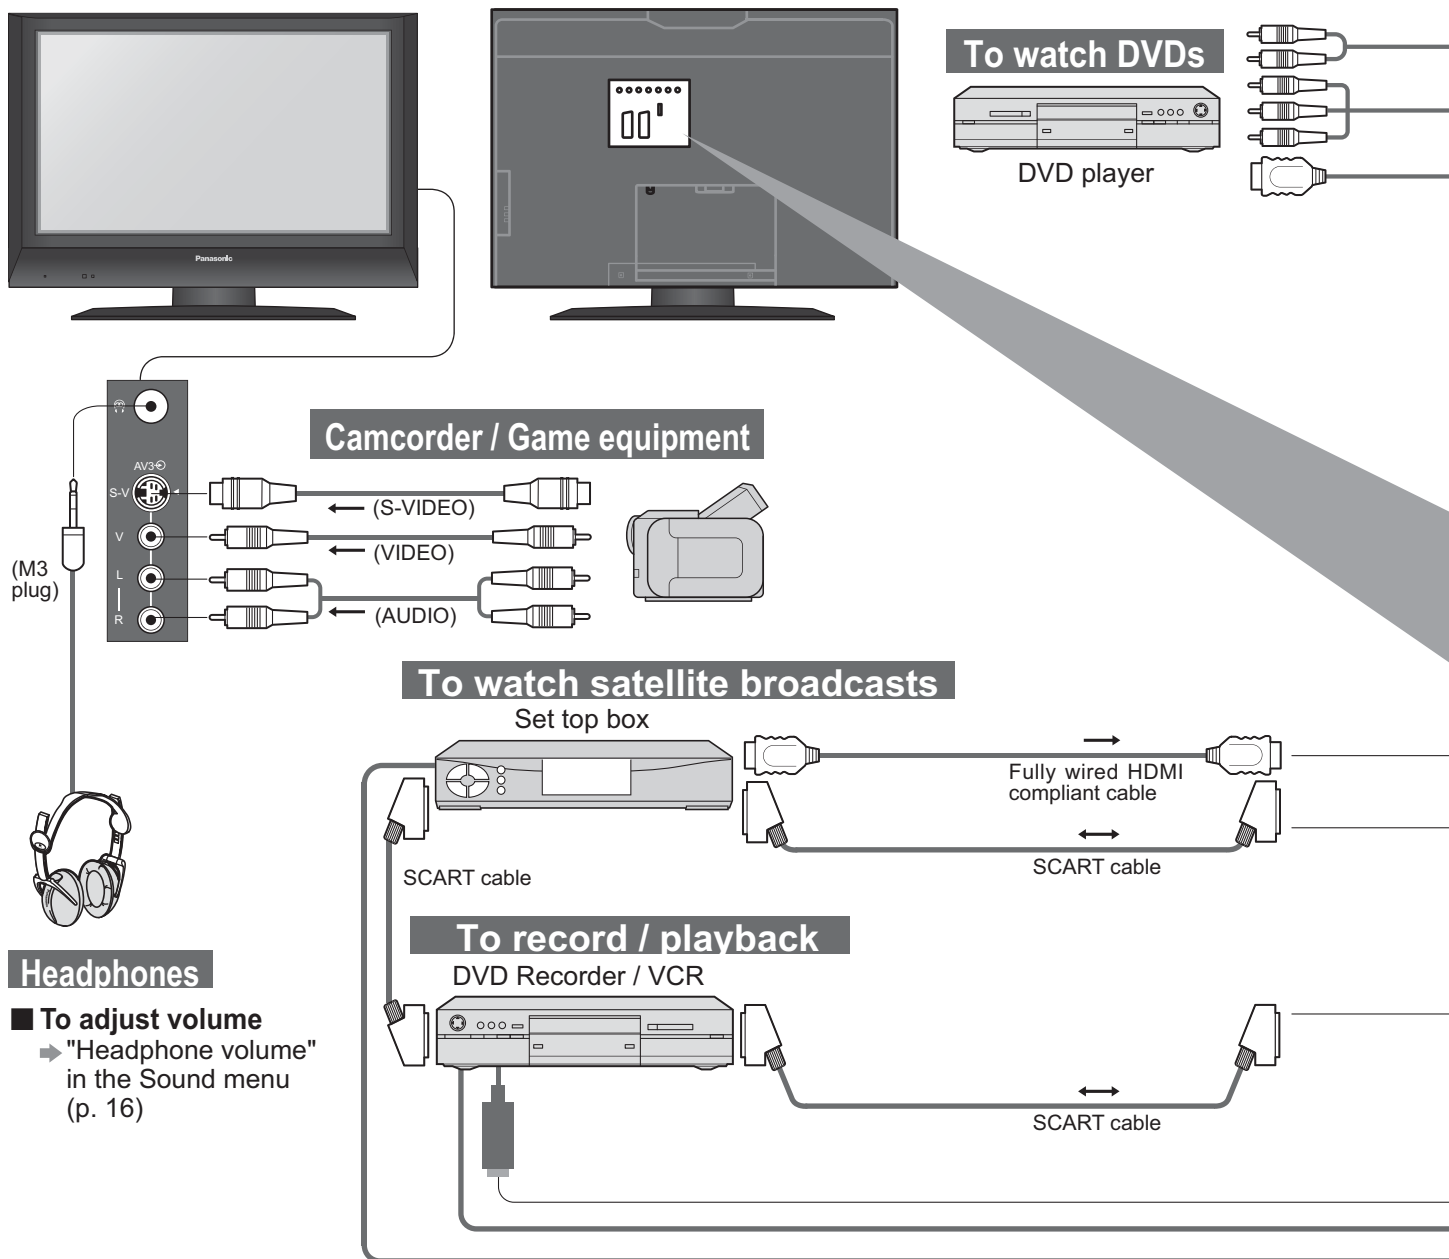

Types of connectable equipment to each connector

Connector	AV1	AV2	AV3	
Recording / Playback (equipment)				
■ To record / playback videocassettes / DVDs (VCR / DVD recorder)	○	○		
■ To watch DVDs (DVD player)	○	○	○	
■ To watch camcorder images (Video camera)	○	○	○	
■ To watch satellite broadcasts (Set top box)	○	○	○	
■ To play games (Game equipment)	○	○	○	
■ Q-Link	○	○		
■ Direct TV Recording	○	○		
■ VIERA Link				

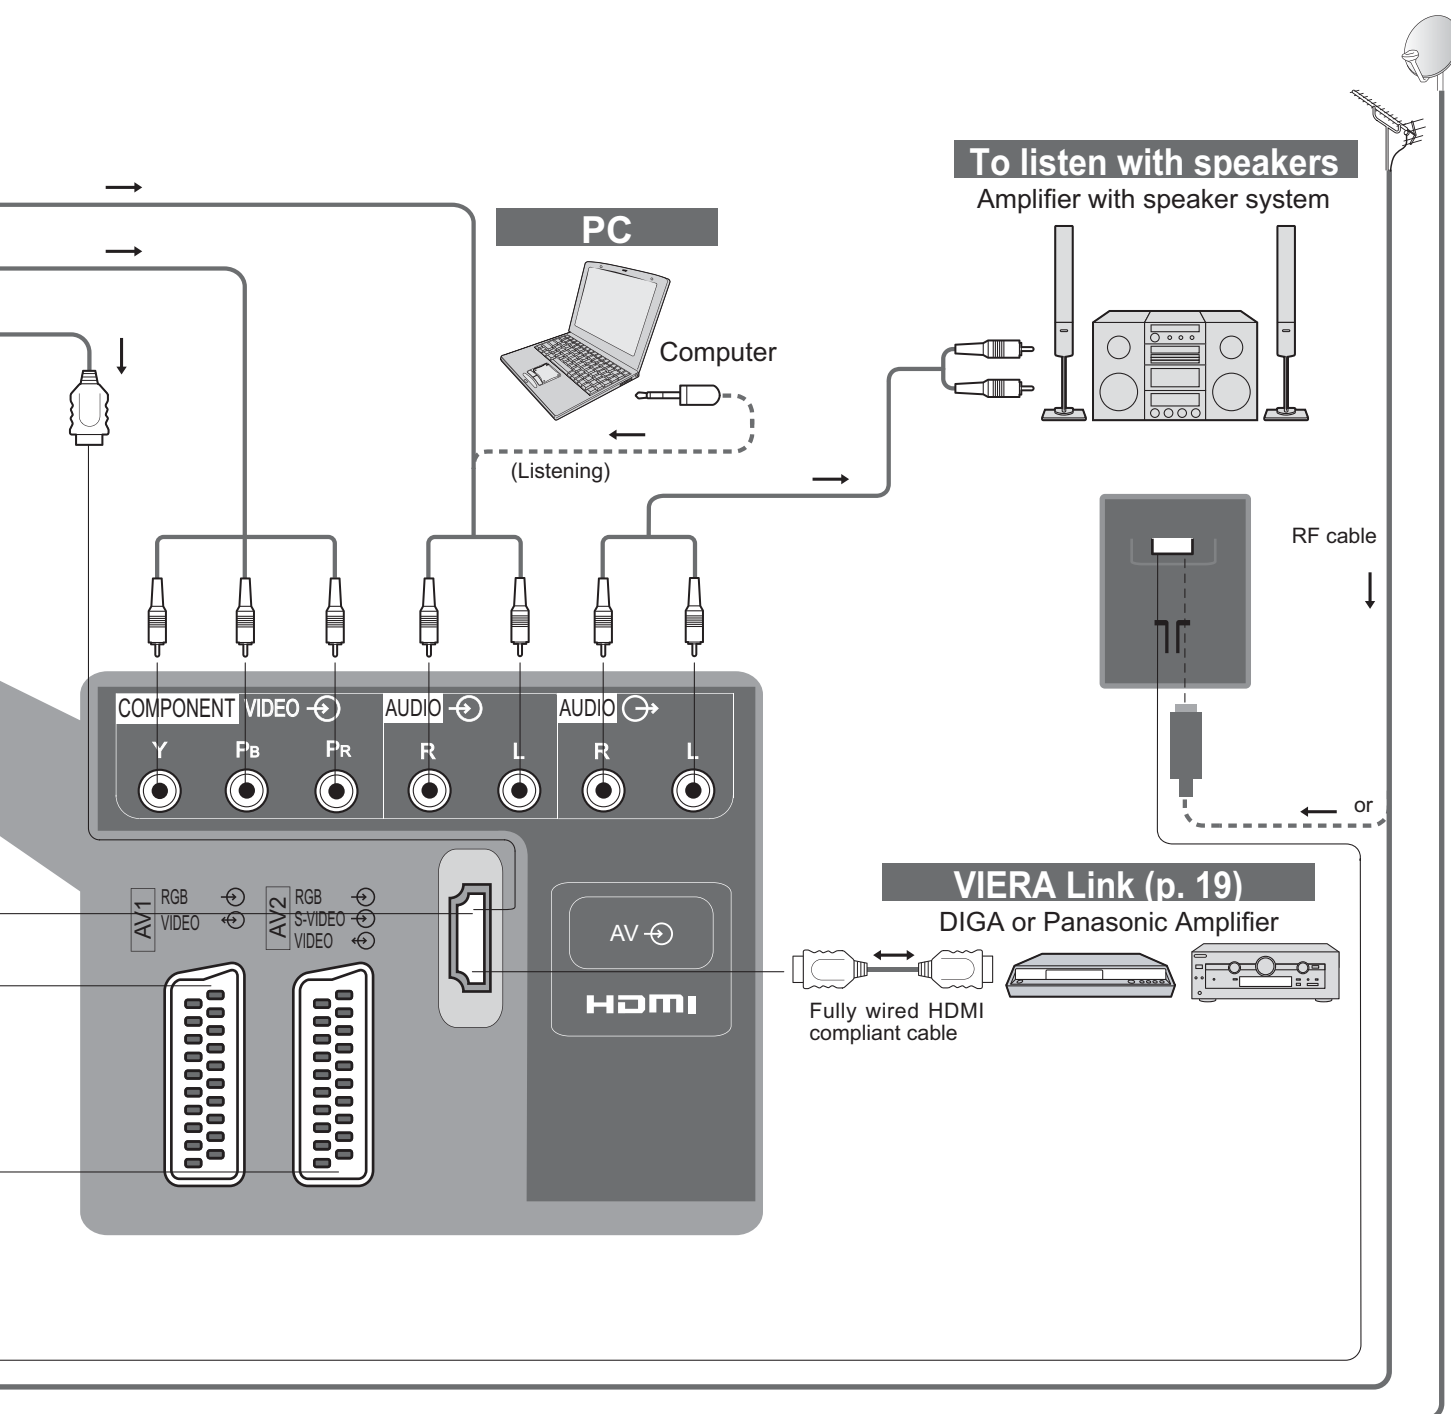

COMPONENT			
Y	Pb	Pr	
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

○: Recommended Connection

Technical Information

Aspect Ratio

The optimum size and aspect can be chosen, and you can enjoy finer images. (p. 10)

■ **Auto aspect:** Auto aspect determines the best aspect ratio to use to fill your screen. It does this using a four step process to determine if the picture being viewed is a widescreen picture.

If Auto aspect detects a widescreen signal it switches into the appropriate 16:9 or 14:9 widescreen mode. If Auto aspect does not detect a widescreen signal then this advanced TV set enhances the picture for optimum viewing pleasure.

The text shown on the screen indicates how Auto aspect determined which ratio to use:


"WIDE" appears in the top left of the screen if a widescreen identification signal (WSS) is found or a signal found through a SCART terminal. Auto aspect switches to the appropriate 16:9 or 14:9 widescreen ratio. This function will also work in any aspect mode. "Auto aspect" appears in the top left of the screen if black stripes above and below the picture are detected. Auto aspect chooses the best ratio and expands the picture to fill the screen. This process can take several minutes, depending on the darkness of the picture.

Signal name		Aspect modes									Aspect Control Signal						
											Widescreen signal (WSS)					Control signal through SCART terminal (pin 8)	
		Auto aspect	16:9	14:9	Just	4:3	4:3 Full	Zoom1	Zoom2	Zoom3	TV	AV1	AV2	AV3	Component	AV1	AV2
TV/AV1/AV2/AV3	PAL I	○	○	○	○	○	—	○	○	○	○	○	○	○	—	○	○
	PAL 525/60	○	○	○	○	○	—	○	○	○	—	—	—	—	—	○	○
	M.NTSC	○	○	○	○	○	—	○	○	○	—	—	—	—	—	○	○
	NTSC (AV input only)	○	○	○	○	○	—	○	○	○	—	—	—	—	—	○	○
Component/HDMI	525(480)/60i	○	○	○	○	○	—	○	○	○	—	—	—	—	—	—	—
	525(480)/60p	○	○	○	○	○	—	○	○	○	—	—	—	—	—	—	—
	625(576)/50i	○	○	○	○	○	—	○	○	○	—	—	—	○	—	—	—
	625(576)/50p	○	○	○	○	○	—	○	○	○	—	—	—	○	—	—	—
	750(720)/50p	○	○	○	○	○	○	○	○	○	—	—	—	—	—	—	—
	750(720)/60p	○	○	○	○	○	○	○	○	○	—	—	—	—	—	—	—
	1125(1080)/50i	○	○	○	○	○	○	○	○	○	—	—	—	—	—	—	—
	1125(1080)/60i	○	○	○	○	○	○	○	○	○	—	—	—	—	—	—	—

Note


- The ratio varies depending on the programme, etc. If the ratio is greater than the standard "16:9", black bands may appear at the top and bottom of the screen.
- If the screen size looks unusual when a widescreen-recorded programme is played back on a VCR, adjust the tracking of the VCR. (See the VCR manual.)
- To select the ratio manually:

 16:9



Directly displays the image at "16:9" without distortion (anamorphic).

 14:9




Displays the image at the standard "14:9" without enlargement.

Just




Displays a 4:3 image full-screen. Stretching is only noticeable at the left and right edges.

 4:3




Displays the image at the standard "4:3" without distortion.

 4:3 Full




Displays a "4:3" image enlarged horizontally to fit the screen.

 Zoom1




Displays a "16:9" letterbox or "4:3" image without distortion.

 Zoom2



Displays a "16:9" letterbox (anamorphic) image full-screen without distortion.

 Zoom3



Displays a "21:9" letterbox (anamorphic) image full-screen without distortion. At "16:9", displays the image at its maximum (with slight enlargement).

HDMI connection

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV unit and the equipment.

HDMI-compatible equipment (*1) with an HDMI or DVI output terminal, such as a set top box or a DVD player, can be connected to the HDMI terminal using an HDMI compliant (fully wired) cable.

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- If the external equipment has only a DVI output, connect to the HDMI terminal via a DVI to HDMI adapter cable (*2).
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal.
- Audio settings can be made on the "HDMI input" menu screen. (p. 11)
- Applicable audio signal sampling frequencies (2ch L.PCM): 48 kHz, 44.1 kHz, 32 kHz

(*1): The HDMI logo is displayed on an HDMI-compliant equipment. (*2): Enquire at your local digital equipment retailer shop.

Note

- Use with a PC is not assumed.
- The 720p/1080i signals will be reformatted before being displayed on the screen.
- If the connected equipment has an aspect adjustment function, set the aspect ratio to "16:9".
- This HDMI connector is "type A".
- An equipment having no digital output terminal may be connected to the input terminal of either "Component", "S-VIDEO", or "Video" to receive analogue signals.
- The HDMI input terminal can be used with only the following image signals:
480i, 480p, 576i, 576p, 720p and 1080i. Match the output setting of the digital equipment.
- For details of the applicable HDMI signals, see p. 26.

VIERA Link

HDMI connections to some Panasonic equipments allow you to enjoy the easy playback or home theatre.


- Setup the equipment to enable this function. Read the manual of the equipment.
- This function may not work normally depending on the equipment condition.
- Image or sound may not be available for the first few seconds when the playback starts.
- Image or sound may not be available for the first few seconds when Input mode is switched.
- Volume function will be displayed when adjusting the volume of the equipment
- Easy playback is also available by using the remote control for Amplifier. Read the manuals of Amplifier.

Technical Information

SCART, S-video and HDMI terminals information

■ AV1 SCART terminal (RGB, VIDEO, Q-Link)


Suitable inputs for AV1 include RGB (Red / Green / Blue).

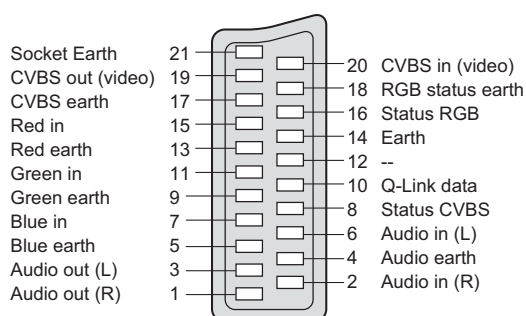


■ AV2 SCART terminal (RGB, VIDEO, S-VIDEO, Q-Link)

Suitable inputs for AV2 include RGB (Red / Green / Blue).


AV2 - Pins 15 and 20 are dependent on AV2 S-VHS / VIDEO switching.

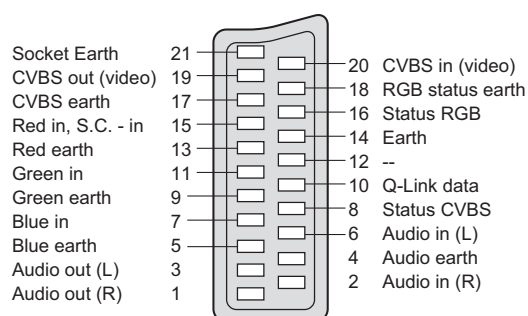

■ AV3 S-VIDEO 4 pin terminal

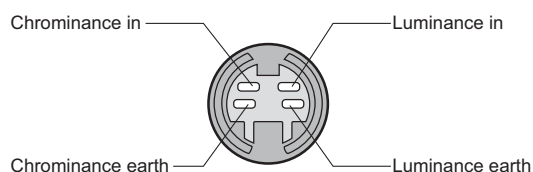

■ HDMI terminal

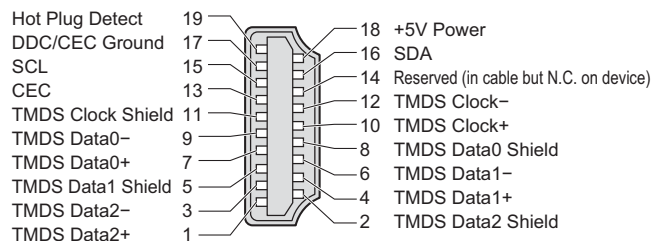

Input signal that can be displayed

* Mark: Applicable input signal for Component (Y, P_B, P_R) and HDMI

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)	Component	HDMI
525 (480) / 60i	15.73	59.94	*	*
525 (480) / 60p	31.47	59.94	*	*
625 (576) / 50i	15.63	50.00	*	*
625 (576) / 50p	31.25	50.00	*	*
750 (720) / 60p	45.00	60.00	*	*
750 (720) / 50p	37.50	50.00	*	*
1,125 (1,080) / 60i	33.75	60.00	*	*
1,125 (1,080) / 50i	28.13	50.00	*	*


Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.

FAQs

Before requesting service or assistance, please follow these simple guides to resolve the problem. If problem still persists, please contact your local Panasonic dealer or Panasonic Customer Care Centre for assistance.

White spots or shadow images (noise)

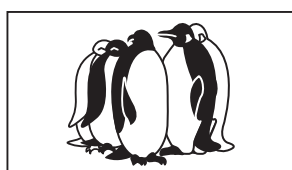

- Check the position, direction, and connection of the aerial.

Direct TV record / Q-Link functions not recording

- Please confirm SCART cable and connection. Also please set "AV1/ AV2 out" in the Setup menu (p. 16).


There may be red spots, blue spots, green spots and black spots on the screen

- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue or black. Please note this does not affect the performance of your LCD.

The LCD panel moves slightly when it is pushed with a finger

Clattered sound might be heard

- There are some looseness around the panel to prevent the damage to the panel. The panel might move slightly when it is pushed with a finger, and clattered sound might be heard. This is not a malfunction.

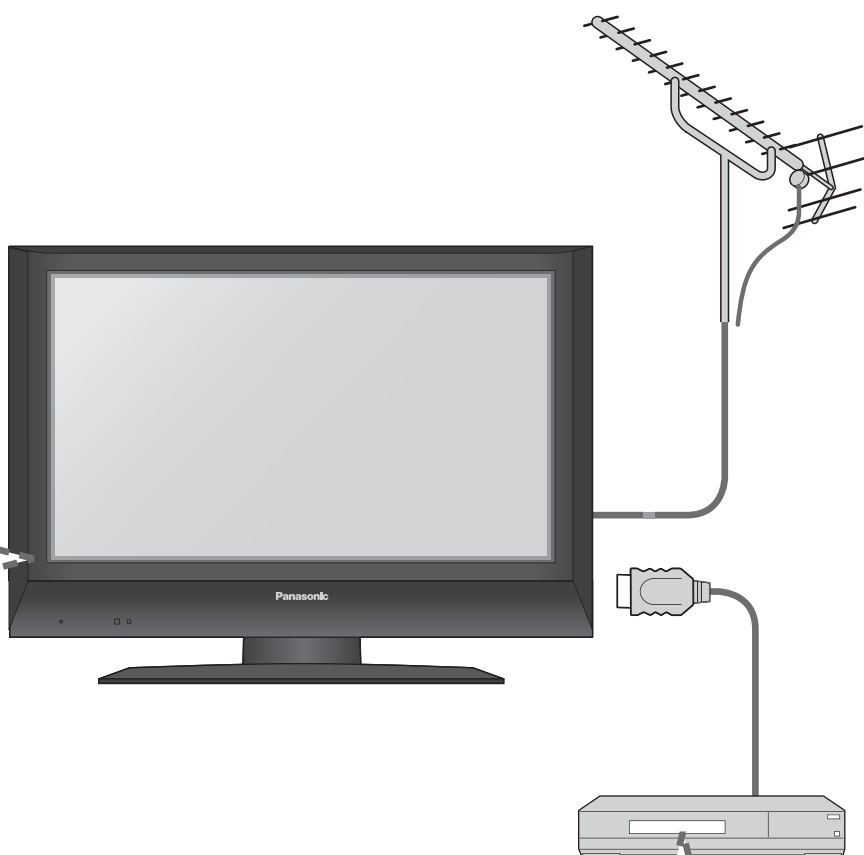

Pictures from an equipment are unusual when the equipment is connected via HDMI

- Is the HDMI cable connected properly? (p. 22)
- Turn Off the TV unit and equipment, then turn them On again.
- Check an input signal from the equipment. (p. 20)
- Use an equipment compliant with EIA/CEA-861/861B.

The remote control does not work

- Are the batteries installed correctly? (p. 6)
- Has the TV unit been switched On?

FAQs

	Problem	Actions
Screen	Chaotic image, noisy	<ul style="list-style-type: none"> ● Set "P-NR" in the Picture menu (to remove noise). (p. 14) ● Check nearby electrical products (car, motorcycle, fluorescent lamp).
	No image can be displayed	<ul style="list-style-type: none"> ● Is "Colour" or "Contrast" in the Picture menu set to the minimum? (p. 14)
	Blurry or distorted image (no sound or low volume)	<ul style="list-style-type: none"> ● Reset channels. (p. 16)
	Neither image nor sound is produced	<ul style="list-style-type: none"> ● Is the unit in "AV mode"? ● Is the mains lead plugged into the socket outlet? ● Is the TV unit turned On? ● Check Picture menu (p. 14) and volume.
Sound	No sound is produced	<ul style="list-style-type: none"> ● Is "Sound Mute" active? (p. 7) ● Is the volume set to the minimum?
	Sound level is low or sound is distorted	<ul style="list-style-type: none"> ● Sound signal reception may be deteriorated. ● Set "MPX" (p. 14) in the Sound menu to "Mono".
HDMI	Sound is unusual	<ul style="list-style-type: none"> ● Set the sound setting of the connected equipment to "2ch L.PCM". ● Check the "HDMI input" setting in the Sound menu. (p. 14) ● If digital sound connection has a problem, select analogue sound connection. (p. 25)
	An error message appears	<ul style="list-style-type: none"> ● Contact the authorized Service Centre.
	"VIERA Link" function does not work	<ul style="list-style-type: none"> ● Switch the TV unit on again with the equipment on. ● Set "VIERA Link" to "Off", then set to "On" again. (p. 19)
Other	TV unit goes into "Standby mode"	<ul style="list-style-type: none"> ● The sleep function is activated. ● The TV unit enters "Standby mode" about 30 min. after broadcasting ends.
	An error message appears	<ul style="list-style-type: none"> ● Follow the message's instructions. ● If the problem persists, contact the authorized Service Centre.

Licence

Trademark Credits

- VGA is a trademark of International Business Machines Corporation.
- Macintosh is a registered trademark of Apple Computer, USA.
- S-VGA is a registered trademark of the Video Electronics Standard Association.
Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.
- HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- HDAVI Control™ is a trademark of Matsushita Electric Industrial Co., Ltd.

Specifications

		TX-26LE7FA		TX-32LE7FA	
Power Source		AC 220-240 V, 50 Hz			
Power Consumption	Average use	92 W		121 W	
	Standby condition	1 W			
Display panel	Aspect Ratio	16:9			
	Visible screen size	66 cm		80 cm	
	Number of pixels	1,049,088 (1,366 (W) × 768 (H))			
Audio Output		2 × 8 W RMS, 8 Ω			
Headphones		M3 (3.5 mm) Jack × 1			
Receiving Systems / Band name		PAL B, G, I, SECAM B, G SECAM L / L' VHF E2 - E12 VHF A - H (ITALY) CATV (S01 - S05) CATV S11 - S20 (U1 - U10) PAL D, K, SECAM D, K VHF R1 - R2 VHF R6 - R12 PAL 525/60 M.NTSC NTSC (AV input only)			
		VHF H1 - H2 (ITALY) UHF E21 - E69 CATV S1 - S10 (M1 - M10) CATV S21 - S41 (Hyperband) VHF R3 - R5 UHF E21 - E69 :Playback of NTSC tape from some PAL Video recorders (VCR). :Playback from M. NTSC Video recorders (VCR). :Playback from NTSC Video recorders (VCR).			
Aerial - Rear		VHF / UHF			
Operating Conditions		Temperature : 5 °C - 35 °C Humidity : 5 % - 90 % RH (non-condensing)			
Teletext pages		200			
Connection Terminals	AV1 (Scart terminal)		21 Pin terminal (Audio/Video in, Audio/Video out, RGB in, Q-Link)		
	AV2 (Scart terminal)		21 Pin terminal (Audio/Video in, Audio/Video out, RGB in, S-Video in, Q-Link)		
	AV3	VIDEO	RCA PIN Type × 1 1.0 V[p-p] (75 Ω)		
		S-VIDEO	Mini DIN 4-pin Y:1.0 V[p-p] (75 Ω) C:0.286 V[p-p] (75 Ω)		
		AUDIO L - R	RCA PIN Type × 2 0.5 V[rms]		
	Others	COMPONENT	Y 1.0 V[p-p] (including synchronization) PB, PR ±0.35 V[p-p]		
		HDMI	TYPE A Connector		
		AUDIO L - R	RCA PIN Type × 2 0.5 V[rms]		
Output	AUDIO L - R	RCA PIN Type × 2 0.5 V[rms] (high impedance)			
Dimensions (W × H × D)					
	Including TV stand	657 mm × 525 mm × 239 mm		791 mm × 615 mm × 239 mm	
	TV set only	657 mm × 473 mm × 107 mm		791 mm × 563 mm × 107 mm	
Weight		12,5 kg Net		16 kg Net	

Note

- Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.
- This equipment complies with the EMC standards listed below.
EN55013:2001+A1:2003, EN55020:2002+A1:2003+A2:2005, EN61000-3-2:2000+A2:2006, EN61000-3-3:1995+A1:2001

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number _____

Serial Number _____

Matsushita Electric Industrial Co., Ltd.

Web Site : <http://www.panasonic.net>

© 2007 Matsushita Electric Industrial Co., Ltd. All Rights Reserved.